

Update Date : 2017-07-28 Print Date : 2020-02-27

Maintenance operations: **A** = Check and adjust if necessary; **R** = Replace, change or lubricate; **C** = Cleaning;
 I = Inspect and correct or replace as necessary; **L** = Lubricate; **T** = Tighten to specified torque.

SERVICE INTERVAL: (Odometer reading or months, whichever comes first.)	ODOMETER READING																MONTHS		
	x 1000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70		75	80
	x 1000 miles	0.6	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	
CHASSIS AND BODY																			
19 Clutch pedal																			6
20 Clutch fluid																			
Manual transmission																			Initial inspection at first 5000 km (3000 miles) or 3 months. Afterwards, inspect at every 10000 km (6000 miles) or 6 months, and replace at every 40000 km (24000 miles) or 24 months.
AMT (Automated Manual Transmission)																			Initial inspection at first 5000 km (3000 miles) or 3 months. Afterwards, inspect at every 10000 km (6000 miles) or 6 months, and replace at every 20000 km (12000 miles) or 12 months.
21 AMT (Automated Manual Transmission)																			
Auto clutch unit master cylinder cup and rubber parts																			Replace at every 24 months.
Clutch release cylinder cup and rubber parts																			Replace at every 12 months.
Clutch release lever, clevis, pin and bush																			Inspection at every 12 months.
Auto clutch unit motor condition																			Inspection at every 12 months.
22 Parking brake																			6
23 Brake pedal																			
Auto adjustment type																			6
Manual adjustment type																			3
24 Brake linings and drums																			6