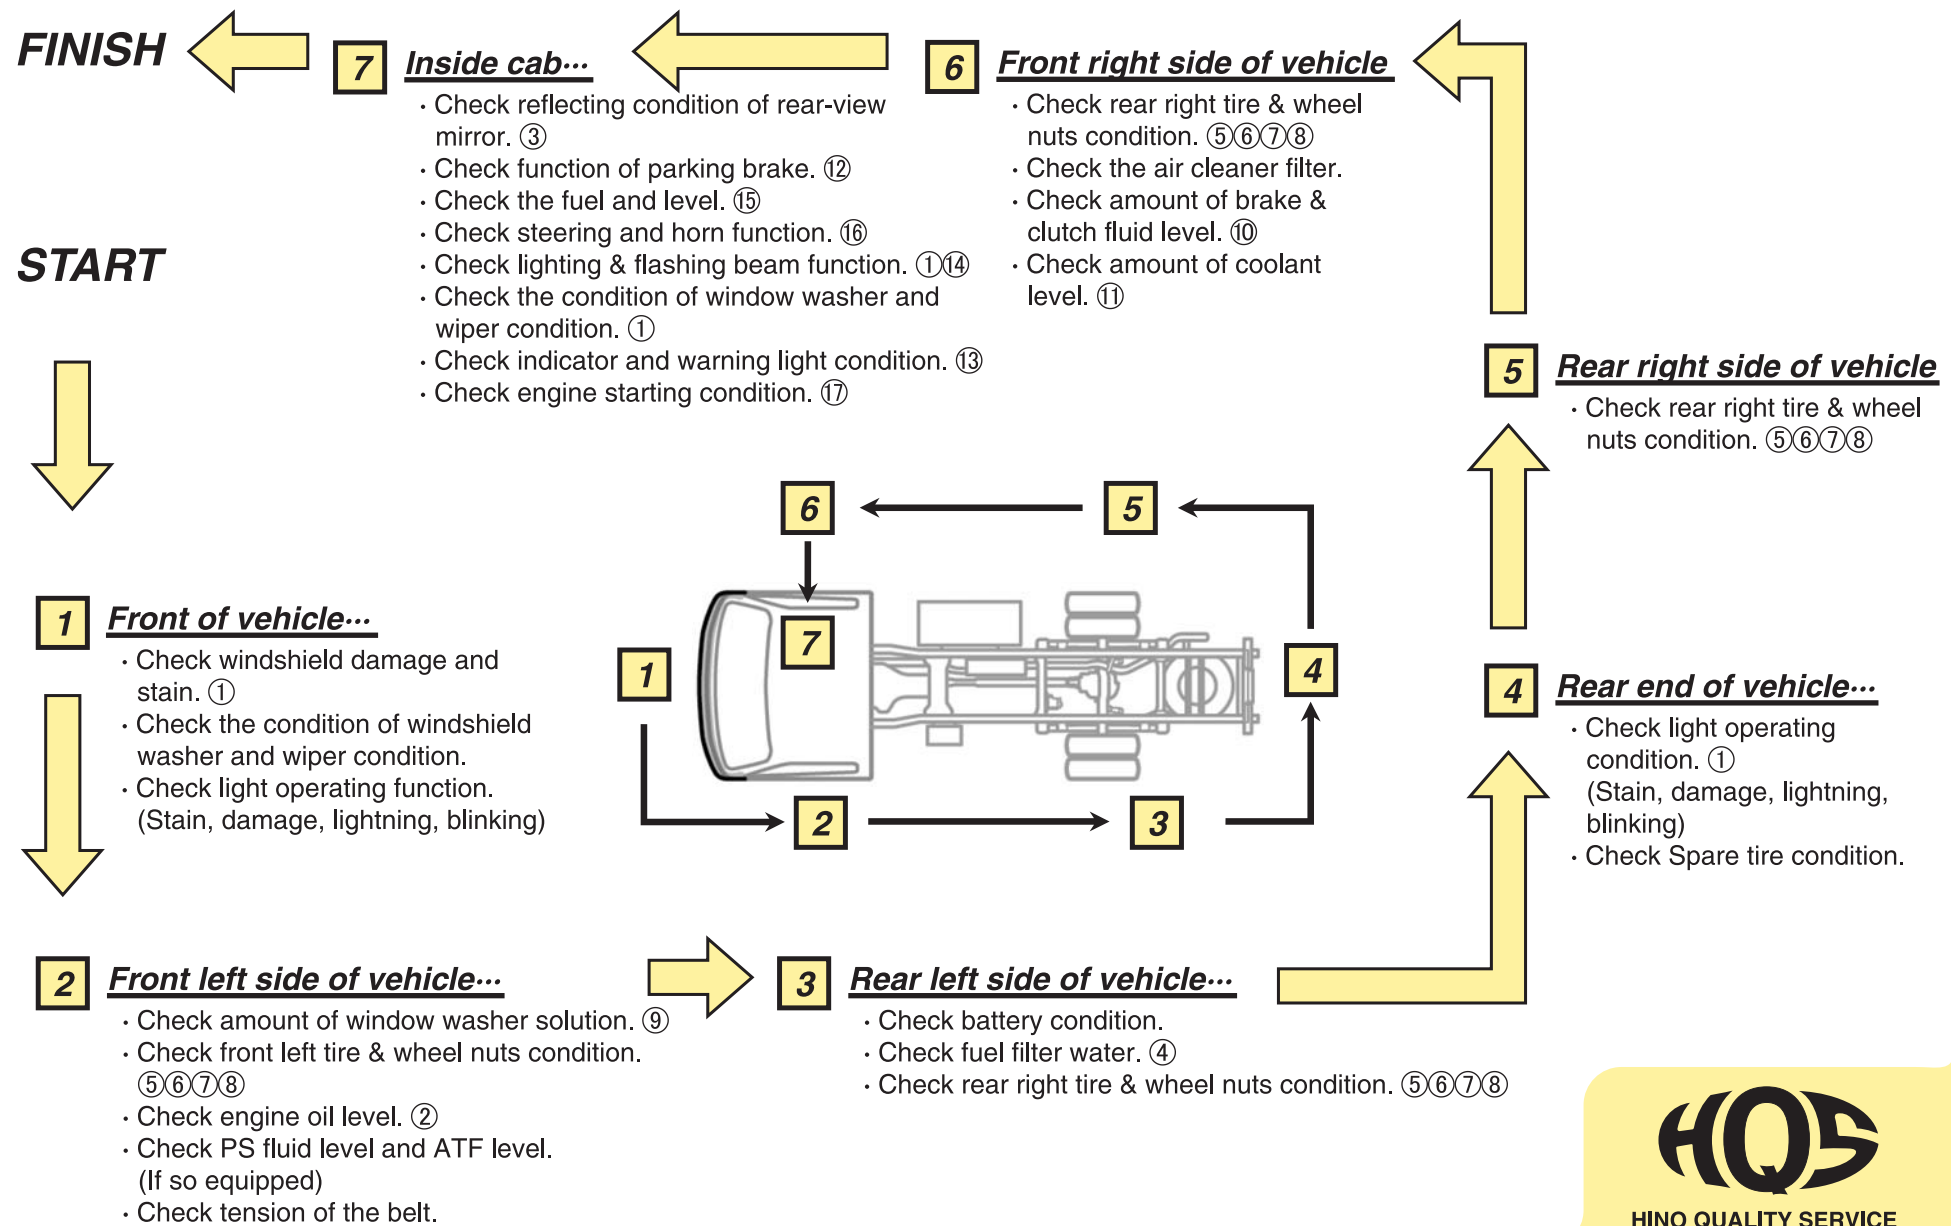


# HINO300 Series Daily Inspection (RHD)



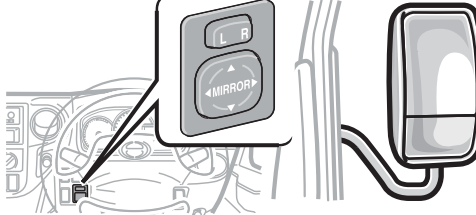
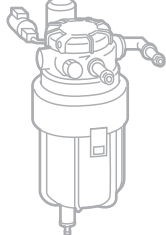
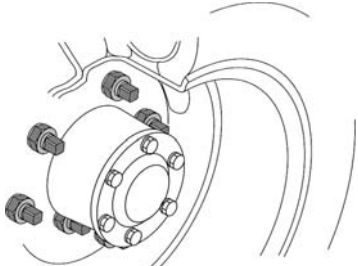
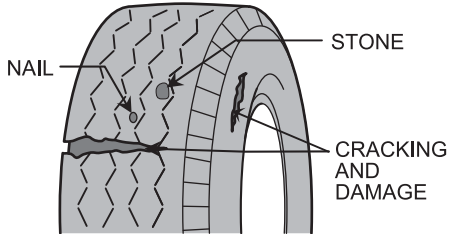
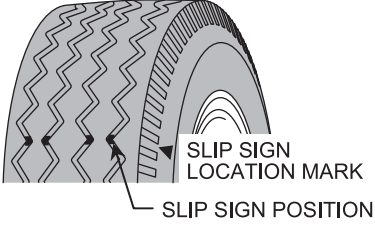
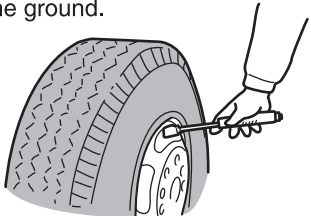
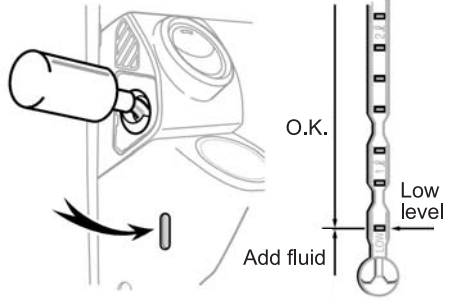
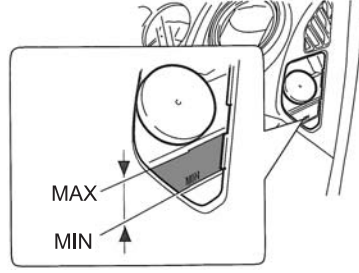
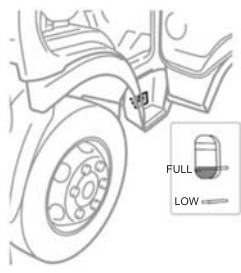
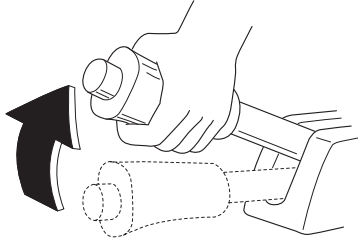
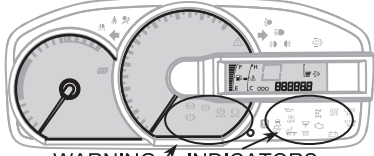
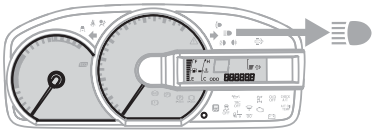
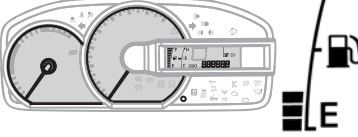
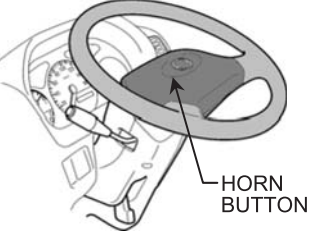
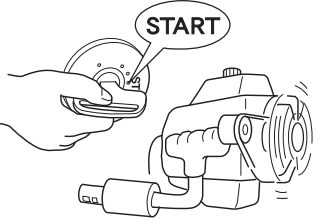
## -PRECAUTION-

- 1) Check and repair any defective parts or malfunction found at the previous operation regardless of this inspection.
- 2) Let the engine idle until the coolant temperature gauge starts to move. When the engine is cold, do not raise it nor leave it at high speed engine revolution.
- 3) After all inspection is completed, make sure that the load condition is proper.



HINO QUALITY SERVICE  
Pub No.SD-SC-11E1

## Process of daily inspection

<p>① <b>Spraying condition of window washer solution and wiper blade condition. Check light operating function. (Stain, damage, lightning, blinking)</b></p> 	<p>② <b>Engine oil level</b> It is normal if the level is within the slotted zone of oil level gauge.</p> 	<p>③ <b>Reflecting condition of rear-view mirrors</b> Check to see that each mirror is correctly adjusted for the driver to be able to see clearly the back and side.</p> 	<p>④ <b>Draining fuel filter water</b> The water in the fuel filter must be drained immediately.</p> 	
<p>⑤ <b>Wheel lug nuts tightness</b></p> 	<p>⑥ <b>Clacks, damage and foreign material</b></p> 	<p>⑦ <b>Groove depth and abnormal wear</b></p> 	<p>⑧ <b>Air pressure</b> Check the tire inflation by visual check of the tire deflection at its contacting section with the ground.</p> 	
<p>⑨ <b>Amount of window washer solution</b></p> 	<p>⑩ <b>Brake &amp; clutch fluid level</b> It is normal if the level is between "MAX" and "MIN".</p> 	<p>⑪ <b>Engine coolant level</b> It is normal if the level is between "FULL" and "LOW" in a tank.</p> 	<p>⑫ <b>Lever stroke of center parking brake (6~10 clicks)</b></p> 	
<p>⑬ <b>Warning indicators</b> If malfunction indicator(s) is lighting up, check the corresponding system or ask to HINO dealer.</p>  <p>WARNING INDICATORS</p>	<p>⑭ <b>Passing &amp; high beam function</b> Check high beam &amp; passing function when the beam control switch is operated.</p> 	<p>⑮ <b>Fuel gauge</b> Check the fuel gauge. Replenish fuel if the needle approaches "E". (red zone)</p> 	<p>⑯ <b>Horn switch function</b> Push the horn button and check the function.</p>  <p>HORN BUTTON</p>	<p>⑰ <b>Engine starting condition</b> Check the engine starts quickly.</p>  <p>START</p>