

# Daily Inspection (Medium Duty)

Detailed information for No. ①~⑳ are stated at the back.  
Refer to the concerned No. of the items when you check.

## -PRECAUTION-

- 1) Check and repair any defective parts or malfunction found at the previous operation regardless of this inspection.
- 2) Let the engine idle until the coolant temperature gauge starts to move. When the engine is cold, do not raise it nor leave it at high speed engine revolution.
- 3) After all inspection is completed, make sure that the load condition is proper.

**START**

**FINISH**

### 1 Front right wheel...

- Check front right tire & wheel nuts condition. [13 14 15 16]

### 2 Front of vehicle...

- Check coolant level. [①]
- Check clutch fluid level. [⑧]
- Check amount of window washer solution. [⑨]
- Check light function. (stain, damage, lighting, blinking)

### 3 Left side of vehicle...

- Check engine oil level. [②]
- Check water separator. [③]
- Check front left tire & wheel nuts condition. [13 14 15 16]

### 8 Inside of cab...

- Check indicator and warning light condition. [17]
- Check engine starting condition. [4]
- Check function of parking brake. [6]
- Check windshield damage and stain. [10]
- Check the condition of windshield washer and wiper condition. [11]
- Check reflecting condition of rear-view mirrors. [12]
- Check lighting & flashing beam function. [18]
- Check steering and horn function. [19]
- Check the fuel level. [20]

### 7 Right side of vehicle...

- Drain water in the air tank. [5 Full air brake and air over brake only]
- Check brake fluid level. [7 Hydraulic brake and air over brake only]

### 6 Rear right wheel...

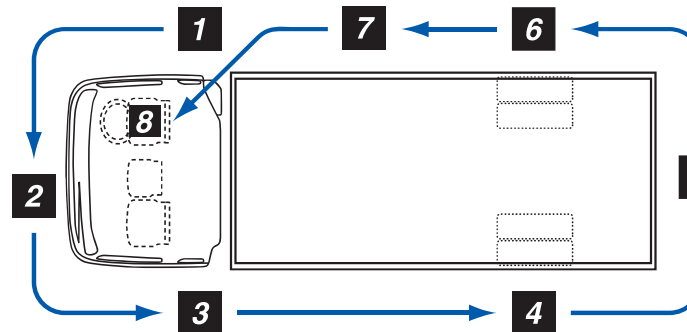
- Check rear right tire & wheel nuts condition. [13 14 15 16]

### 5 Rear end...

- Check light operating condition. (stain, damage, lighting, blinking)

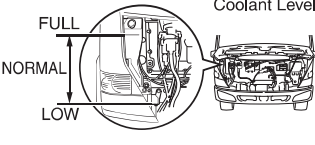
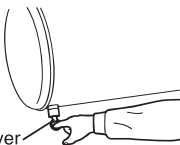
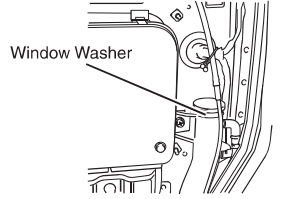

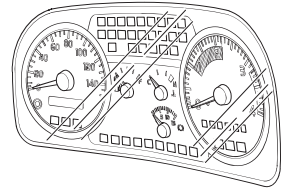
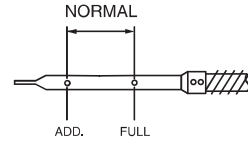
 

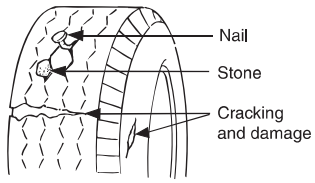
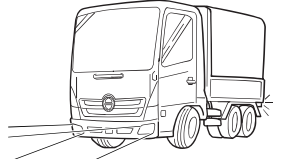
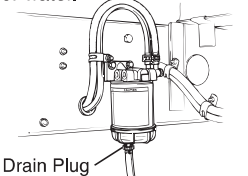
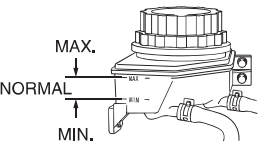

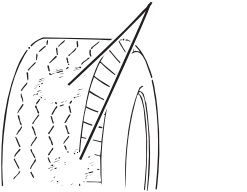
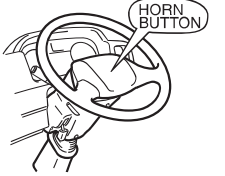
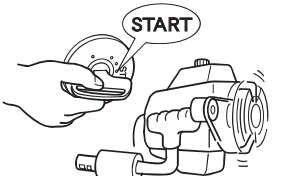
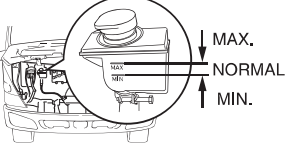

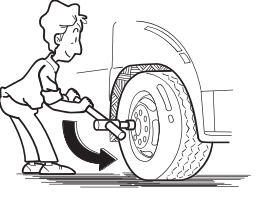
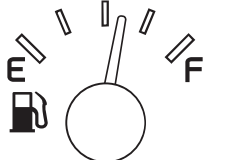
### 4 Rear left wheel...

- Check rear left tire & wheel nuts condition. [13 14 15 16]



HINO QUALITY SERVICE

# Process of daily inspection

Engine	Brake & Clutch	Visibility	Tire	Electrical equipment
<p>① <b>Engine coolant level</b> It is normal if the level is between "FULL" and "LOW" in a tank.</p>  <p>Coolant Level</p>	<p>⑤ <b>Draining accumulation water in the air tank</b> Pull a drain cock lever to drain accumulation water in the air tank.</p>  <p>Drain Cock Lever</p>	<p>⑨ <b>Amount of window washer solution</b></p>  <p>Window Washer</p>	<p>⑬ <b>Air pressure</b> Check the tire inflation by visual check of the tire deflection at its contacting section with the ground.</p> 	<p>⑰ <b>Function of warning light and indicator light</b></p> 
<p>② <b>Engine oil level</b> It is normal if the level is within the slotted zone of oil level gauge.</p>  <p>NORMAL</p> <p>ADD. FULL</p>	<p>⑥ <b>Function of parking brake</b> -Wheel parking brake- Check the exhaust noise when it is operated. -Centrt parking brake- Check the lever stroke.</p> 	<p>⑩ <b>Windshield damage, stain</b></p>  <p>STAIN</p>	<p>⑭ <b>Clacks, damage and foreign material</b></p>  <p>Nail</p> <p>Stone</p> <p>Cracking and damage</p>	<p>⑱ <b>Lighting function</b> Check the high beam &amp; passing function when the beam control switch is operated.</p> 
<p>③ <b>Accumulation of water in the water separator</b> Check the collection bowl for water.</p>  <p>Drain Plug</p>	<p>⑦ <b>Brake fluid level</b> It is normal if the level is between "MAX" and "MIN" in a tank.</p>  <p>MAX.</p> <p>NORMAL</p> <p>MIN.</p>	<p>⑪ <b>Spraying condition of window washer solution and wiper blade condition</b> Check the washer solution is sprayed by pushing the switch, and wiper wipes windshield clearly.</p> 	<p>⑮ <b>Groove depth and abnormal wear</b></p>  <p>Abnormal Wear</p>	<p>⑲ <b>Steering &amp; horn function</b> Check the steering condition and push the horn button function.</p>  <p>HORN BUTTON</p>
<p>④ <b>Engine starting condition</b> Check the engine starts quickly.</p>  <p>START</p>	<p>⑧ <b>Clutch fluid level</b> It is normal if the level is between "MAX" and "MIN" in a tank.</p>  <p>MAX.</p> <p>NORMAL</p> <p>MIN.</p>	<p>⑫ <b>Reflecting condition of rear-view mirrors</b> Check to see that each mirror is correctly adjusted for the driver to be able to see clearly the back and side.</p> 	<p>⑯ <b>Wheel nuts tightness</b></p> 	<p>⑳ <b>Fuel level</b> Check the fuel level. Replenish fuel if the pointer gets near the "E".</p>  <p>E F</p>